

Section	Page	Section	Page
I	INTRODUCTION	1-1	
	Description	1-1	
1-2	Basic Frame	1-1	
1-4	Model-Manual Information.....	1-1	
1-6	Specifications	1-1	
1-8	Options	1-1	
1-9	Metric Calibration (Option 001)	1-1	
1-11	X-Axis Retransmitting Potentiometer (Option 003)	1-1	
1-13	Accessories	1-1	
1-15	Model 7562A Logarithmic Converter	1-1	
1-17	Model 7563A Log Voltmeter/Amplifier	1-4	
1-19	Model 17108A Time Base	1-4	
1-21	Model 10025A Straight-through Voltage Probe	1-4	
1-23	Model 10111A Adapter	1-4	
1-25	Model 10002A/B/C/D Voltage Divider Probe	1-4	
1-27	Model 11000A Cable Assembly	1-4	
1-29	Typical Performance	1-4	
1-30	Input Resistance vs Off Balance Characteristics	1-4	
1-32	Normal Mode Noise	1-4	
1-34	Dynamic Response	1-5	
II	INSPECTION AND INSTALLATION		
2-1	Introduction	2-1	
2-3	Incoming Inspection	2-1	
2-4	Mechanical Checks	2-1	
2-6	Electrical Checks	2-1	
2-8	Damage Claims	2-1	
2-10	Storage	2-1	
2-12	Shipping	2-1	
2-14	Recorder Installation	2-1	
2-16	Cooling	2-1	
2-18	Stacking H-P Instruments	2-1	
III	OPERATING INSTRUCTIONS		
3-1	Operating Requirements	3-1	
3-2	General	3-1	
3-4	Controls, Connectors, and Indicators	3-1	
3-6	Electrical Requirements	3-1	
3-7	Operating Power	3-1	
3-9	Input Signals	3-1	
3-11	Grounding	3-1	
3-13	Recording Input Connections	3-1	
3-15	Connection Techniques for the Guard Shield	3-1	
3-17	Maximum Allowable Source Impedance	3-1	
3-19	Operating Precautions	3-3	
3-23	Operating Instructions	3-3	
3-24	Operational Conditions.....	3-3	
3-26	Connect Power	3-3	
3-28	Connect Inputs	3-3	
3-30	Energize Recorder	3-3	
3-32	Install Paper	3-4	
3-34	Install Pen	3-4	
3-36	Zero Set	3-4	
3-38	Lower Pen	3-4	
IV	THEORY OF OPERATION		
4-1	General Operation Description	4-1	
4-7	Circuit Description	4-1	
V	MAINTENANCE, PERFORMANCE, CHECKS AND ADJUSTMENTS		
5-1	Introduction	5-1	
5-3	Preventive Maintenance	5-1	
5-4	General	5-1	
5-6	Environmental Operation.....	5-1	
5-8	Cleaning	5-1	
5-10	Potentiometer Cleaning	5-2	
5-12	Lubrication	5-2	
5-14	Visual Lubrication	5-2	
5-16	Mechanical Maintenance.....	5-2	
5-17	Disassembly/Assembly	5-2	
5-19	Carriage Arm Removal	5-3	
5-21	Pen Carriage Removal	5-3	
5-23	Potentiometer Replacement - X-Axis	5-4	
5-25	Wiper Replacement - X-Axis	5-4	
5-27	Potentiometer Replacement - Y-Axis	5-5	
5-29	Wiper Replacement - Y-Axis	5-5	
5-31	Servo Motor Maintenance	5-5	
5-33	X-Axis Servo Motor Replacement	5-5	
5-35	Y-Axis Servo Motor Replacement	5-5	
5-37	Brush Replacement	5-6	
5-39	Correction of Sticking Motor Brushes	5-6	
5-41	Y-Axis Restrunging	5-6	
5-43	X-Axis Restrunging	5-6	
5-45	Electrical Maintenance	5-7	
5-46	Requirements	5-7	
5-48	Performance Tests	5-7	
5-49	Criteria	5-7	
5-51	Test Equipment	5-7	
5-53	Initial Checks	5-8	
5-55	Y-Axis Accuracy and Linearity	5-8	
5-56	X-Axis Accuracy and Linearity	5-8	
5-57	Y-Axis Slewing Speed	5-8	
5-58	X-Axis Slewing Speed	5-8	
5-59	Common Mode Rejection	5-9	
5-60	DC Rejection	5-9	
5-61	AC Rejection	5-9	
5-62	Mechanical Adjustments	5-9	
5-63	Procedure	5-9	
5-65	Y-Axis Drive String Tension Check/Adjustment	5-9	